Weekly timer

User Manual

Actulux

Description
- Installation on DIN-bracket.
- Programming day by day or in 7 different days (week).
- Up to 8 different ON/OFF.
- Exact time setting.
- The LCD display shows the time in hours and minutes and the programming status “ON/AUTO/OFF”.

Technical specifications

Power supply:	180 - 264V (50/60Hz)
Smalles interval:	1 min.
Weight:	approx. 150 g
Display:	LCD
Battery capacity:	150 hours
Number of circuits:	1 voltage free contact SPDT
Load:	16A 250VAC
Operation temperature:	Min. -10 Max. 55°C
Storage temperature:	Min. -20 Max. 70°C
Power consumption:	5VA

Dimensions

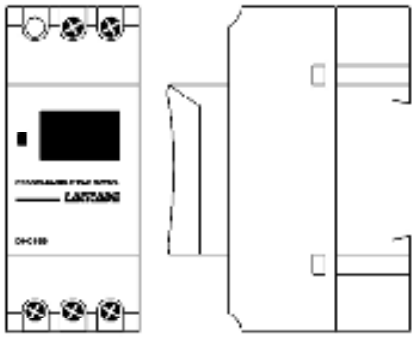

Connection

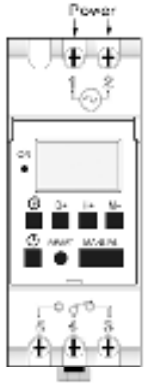

1. Connect AC supply and the batteries will start to charge. Press reset.

2. The weekly timer is pre-set to 24-hours display. To change into 12-hours display, please press ”⊕” for 5 seconds - the display shows ”AM”.
   To change back into 24-hours display, press ”⊕”again for 5 seconds.

3. Programming:

Step	Button	Programming
1	Press ”**P**”	Set the first ”ON time” (the display shows ”1 ON”)
2*	Press ”**D+**”	Select weekday/period (shown on top of the display – if you want the same time is every day, do not press this button)
3	Press ”**H+/M+**”	Set hours and minutes
4	Press ”**P**”	Set the first ”OFF time”
5	Press ”**D+**”	Select weekday/period (shown on top of the display – if you want the same time is every day, do not press this button)
6	Press ”**H+/M+**”	Set hours and minutes
7	Repeat step 2 - 6	Set 2-8 ON/OFF time
8	Press ”⊕”	In order to end the programming

In order to change ON to OFF or conversely, press ”MANUAL”.

* 10 different programs: (1: MO 2: TU 3: WE 4: TH 5: FR 6: SA 7: SU 8: MO,TU, WE, TH, FR 9: SA, SU 10: MO, TU, WE, TH, FR, SA, SU)

4. SETTING OF CLOCK (clock setting)
   (1) Press ”⊕” and ”D+” at the same time until the date of the day is shown.
   (2) Press ”⊕” and ”H+” at the same time in order to set the hours.
   (3) Press ”⊕” and ”M+” at the same time in order to set the minutes.
   (4) Press ’MANUAL” in order to show ”auto on” or ”auto off” depending on whether the clock should be in on- or off-mode after setting the time.

5. Press reset to delete all settings.

NB!
MAY NOT BE LOADED MORE THAN STATED UNDER TECHNICAL SPECIFICATIONS.

Actulux A/S . Haandvaerkervej 2 . DK 9560 Hadsund . DENMARK . www.actulux.com
Phone: +45 98 57 40 90 . Telefax: +45 96 15 28 00 . VAT no.: DK28892195